

DSC POWER 832 BASIC KEYPAD FUNCTIONS

- ❖ **ARMING IN STAY MODE:** Green ready light on (all zones closed). Press and hold **STAY** until it beeps. Motion detectors are by-passed.
- ❖ **ARMING IN AWAY MODE:** Green ready light on (all zones closed). Press and hold **AWAY** until it beeps. Entire system is armed.
- ❖ **BYPASSING ZONES:** Press *1 then enter zone number and #. (If zone number is less than 10, it should be preceded by a "0". EX: 03, 04)
- ❖ **CHIME FEATURE:** To activate or deactivate the chime feature, press and hold **CHIME** until it beeps.
- ❖ **EXIT BUTTON:** When the system is armed in the *STAY* or *AWAY* mode, you can press and hold the **EXIT** button until it beeps and it allows you to exit & re-enter the premise within a two minute period.
- ❖ **INSTANT ARMING:** *9, master code (removes all delays from perimeter doors and puts motions into stay mode)
- ❖ **ALARM MEMORY:** *3, violated zones will light and memory will flash, press reset to clear. Arm & disarm to clear the light.
- ❖ **FIRE ALARM:** To reset the fire alarm press **RESET** on keypad until it beeps or # * 72 on keypad.
- ❖ **TROUBLE LIGHT:** # * 2 when the trouble light is on. This function will light a zone indicator for the type of system trouble:
 - Light 1 – Service required:**
 - Press 1 again to determine the type of service needed:
 - 1. Low battery – Press *2 to stop beeping
 - 2. Bell circuit trouble
 - 3. General System trouble
 - 4. General System tamper
 - 5. General System Supervisory
 - 6. 5204 Low battery
 - 7. 5204 AC failure
 - Light 2 – AC Failure** (transformer unplugged – running off backup battery power.
 - Light 3 – Telephone line trouble** (service interrupted; telephone disc, construction)
 - Light 4 – Panel failed to send central station a signal** (signal interrupted)
 - Light 5 – Zone Fault** – Press 5 again to determine which zone is faulted.
 - Light 6 – Zone Tamper** – Press 6 again to determine which zone is tampered.
 - Light 7 – Low Zone Battery** – (wireless zones, keypads, key). Press 7 for zone. Press 7 again for wireless keypad and 7 again for wireless key.
 - Light 8 – Loss of time and date on system clock.** See instructions below.
- ❖ **RESET CLOCK:** # * 6, master code, 1, time and date (enter in military time format and 6-digit date) press # to finish (for LED keypad only)
- ❖ **CHANGE MASTER CODE:** # * 5, present master code, 40, new 4 digit code, # #
- ❖ **AUXILIARY CODES:** # * 5, master code, auxiliary code position no. (01-32), 4 digit auxiliary code, # #
- ❖ **ERASE AUX. CODES:** # * 5, master code, auxiliary position no. (01-32), * # #
- ❖ **DURESS CODE:** # * 5, master code, 33, 4 digit duress code, # #
- ❖ **TEST SIGNAL:** # * 6, master code, 4 (siren will sound, lights on keypad will flash) # #

** Send a "TEST SIGNAL" to the central monitoring station *MONTHLY*. A monthly test will verify that security system is communication with central station. **

FACTORY DEFAULT MASTER CODE: 1234