

CHEAT SHEET FOR HAI PANELS

ARMING YOUR HAI PANEL

AWAY : Press the **AWAY** button. The display will prompt you for your code. Enter your code. Nothing will be bypassed when you arm in **AWAY** mode.

Entry/Exit times remain the same.

NIGHT : Press the **NIGHT** button. The display will prompt you for your code. Enter your code. This bypasses all motion detector zones and changes the Entry/Exit delay times to zero. When Entry/Exit doors are opened in **NIGHT** mode the alarm sounds instantly.

DAY : Press the **DAY** button. The display will prompt you for your code. Enter your code. This bypasses all motion detector zones but does not change the state of Entry/Exit zones. Entry/Exit delay times remain the same.

DISARMING YOUR PANEL

Press the **OFF** button. The display will prompt you for your code. Enter your code. The panel is disarmed.

BYPASSING ZONES

Any open zones are automatically bypassed at the end of the Exit delay when you arm the system.

SYSTEM TROUBLES

System troubles are displayed on the console LCD and will cause the console to beep until the **OFF** button is pressed. Example: The LCD displays *Low battery trouble now*. When a new battery is installed the LCD will read *Low battery HAD trouble*. Press the star * key to clear past troubles.

RESETTING SMOKE DETECTORS

HAI panels are unique in that they require the user to arm and then disarm in order to reset smoke detectors. Arm in any mode, and then disarm.

PROGRAMMING THE MASTER CODE

Press 9 (setup). Enter the master code (default is 1111). Press 1 (code). The display will show *CODE 1 0000-9999 0000-DISABLE*. Code 1 is the system master code and is required to add/edit all other codes. Enter the code you want then #. When finished press * until you're back to the main screen.

PROGRAMMING ACCESS CODES AND SETTING PARAMETERS

Press 9 (setup). Enter the master code (default is 1111). Press 1 (code). Use the down arrow key to scroll to next available code. Enter a 4 digit code followed by the # key and the down arrow. (You will have to keep a record of all codes and their owners i.e. code 2 belongs to maid, code 3 belongs to pet sitter, etc.) Next choose the appropriate code type (most will be user) and press #. Now set the days and times which the code is to be valid always pressing # to save. If the code is to be always valid skip to the next code or hit * until out of setup menu.

TURNING ON/OFF THE CHIME

HAI panels make a distinction between the Entry/Exit chime and the perimeter (everything else) chime. If you don't want any door or window to beep when opened, you will have to turn off both. Press 9 (setup) the display will prompt you for your code. Enter your code. Now press 5 (arming). Use the down arrow to scroll until you see Entry/Exit chime. Press 0# to turn off or 1# to turn on. Next press the down arrow again to Perimeter chime. Press 0# to turn off or 1# to turn on. Press * until out of setup menu.