

DSC POWER SERIES BASIC FUNTIONS

- ❖ **ARMING IN STAY MODE:** With the green ready light on (all zones closed) press an hold STAY until it beeps. Motion detectors will automatically be bypassed.
- ❖ **ARMING IN AWAY MODE:** With the green ready light on (all zones closed) press and hold AWAY until it beeps. Entire system is armed.
- ❖ **BYPASSING ZONES:** Press *1 then enter the zone to be bypassed (in 2 digit format ie. 01) followed by #.
- ❖ **CHIME FEATURE:** To activate or deactivate the chime feature, press and hold CHIME until it beeps.
- ❖ **EXIT BUTTON:** When the system is armed you can press and hold EXIT button until it beeps. It will then allow you exit & re-enter the premises within a two minute period.
- ❖ **INSTANT ARMING:** Press *9 followed by the master code. This arms the system in STAY mode but removes the delay on entry doors (will not give time to enter code before alarm sounds.)
- ❖ **ALARM MEMORY:** Pressing *3 will display the alarm memory during the last armed period. This memory will be cleared the next time the system is armed.
- ❖ **FIRE ALARM:** If your system is equipped with smoke detectors to reset them press and hold RESET until it beeps or press *72.
- ❖ **TROUBLE LIGHT:** If the trouble light is on pressing *2 will silence the trouble beep and display one or more zone indicators which correspond to the type of system trouble. See below.
 - **Zone 1 – Service required:**
 - Press 1 again to determine the service needed:
 1. Low system battery.
 2. Bell circuit trouble.
 3. General System trouble.
 4. General System tamper.
 5. General System supervisory.
 6. PC5204 low battery.
 7. PC 5204 AC failure.
 - Zone 2 – AC Failure** (No main power – system running on battery.)
 - Zone 3 – Telephone line trouble.** Phone service is interrupted –panel cannot call out.
 - Zone 4 – Panel failed to send central station a signal**
 - Zone 5 – Zone fault** – Press 5 to determine which zone is faulted.
 - Zone 6 – Zone tamper** – Applies to wireless zones. Press 6 to see which zone.
 - Zone 7 – Low zone battery** – Applies to wireless zones. Press 7 for zone.
 - Zone 8 – Loss of system time.** See instructions below.
- ❖ **RESET SYSTEM TIME:** *6, master code, 1 enter time in 24hr format and date mm/dd/yy. Press # when finished. (Example: 2:32pm on 7/04/12 *6, master code, 1, 1432, 070412 #)
- ❖ **CHANGE MASTER CODE:** *5, current master code, 40, new master code (4 digits) # #
- ❖ **USER CODES:** *5, master code, user code position no. (01-32), new user code (4 digits) # #
- ❖ **ERASE USER CODE:** *5, master code, user code position no. (01-32), * # #
- ❖ **DURESS CODE:** *5, master code, 33, duress code (4 digits), # #
- ❖ **TEST SIGNAL:** *6, master code, 4 –siren will sound, lights on keypad will flash # # **Send a test signal at least monthly.**

FACTORY DEFAULT MASTER CODE IS 1234

